

*FDC™ Faux-Beams* provides a complete line of architectural faux wood materials, with turnkey installation, to builders and developers of residential and commercial projects. We provide a selection of pre-designed faux wood beam size and styles. We offer custom design in the rustic with crack beams any size or length.

**FDC Faux Beams & Corbels:**

- Rustic Beams
- Rustic Corbels
- Contemporary Beams
- Contemporary Corbels
- Accessories



*Our Goal* is to provide you with the highest quality products and services. within budget and complete satisfaction.

- *Lightweight* • *Inexpensive* • *Easy to install* • *Realistic* • *Maintenance free*
- *Weatherproof* • *Pest proof* • *Green Building product*



T 01 A	T 01 B
11.48 Ft.	14.76 Ft.



T-30C
18'9 in.



T 02A
11.3 Ft.



T 12A	T 12B
11.46 ft.	14.76 ft.



T 17A	T 17B
11.46 ft.	14.76 ft.



T 09A
9.8 Ft.



T-25C
18'9 in.



T 20A	T 20B
11.46 ft.	14.76 ft.

PLANKS




PM 09
11.48 FT.




PM 12
11.48 FT.




T 28
11.48 FT.

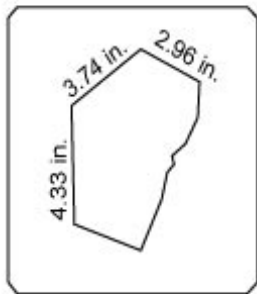


M-09

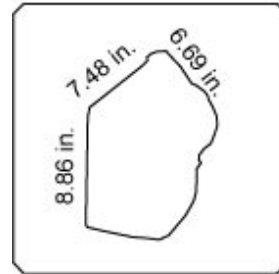

M-20

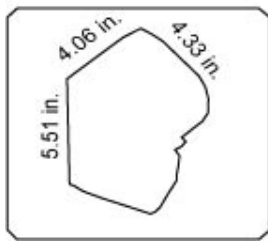

M-12

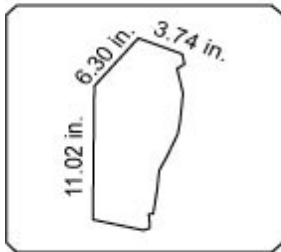

M-16







<b>BEAMS</b>	<b>RECOMMENDED CORBELS</b>
T-12	M-12 / M-16
T-20	M-20
T-01/ T-17 / T-20	M-22
T-01	M-23
T-01	F-03
T-09	M-09
T-02	F-04 / M-16
MB-25	M-25 / M-26
MB-30	M-30 / M-31




REFINED PINE BEAMS




CORBELS

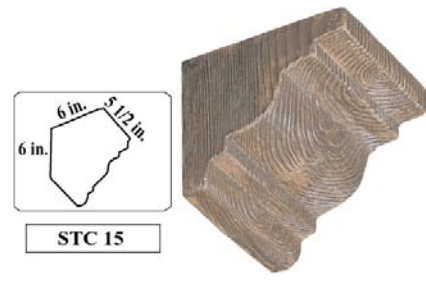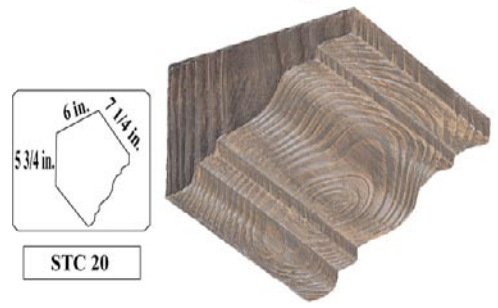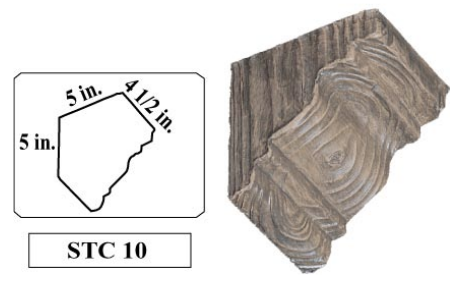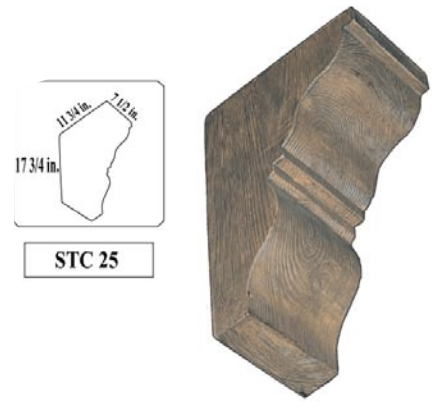


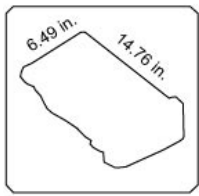



F-04

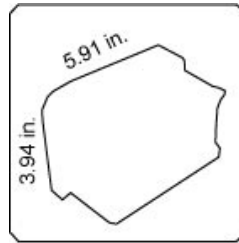

F-03

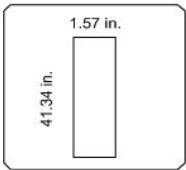

S-01 Strap

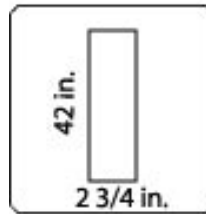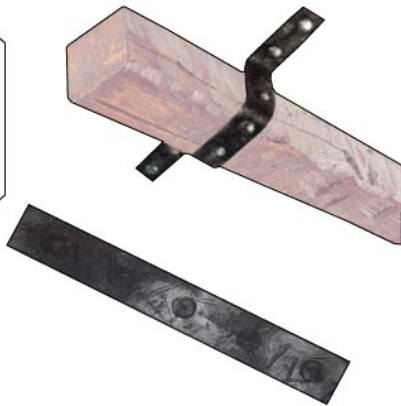

S-02 Strap



### Re-touching User Advise:

"Our rustic faux beams are stained with a solvent based coating. Touch-up stain may be applied for scratches, but it is very important that you very lightly and very quickly "feather" the touch-up stain with a scanty dipped brush. You should do this in one direction only. We strongly suggest that you practice this on a scrap piece of faux beam first, as improper use of the touch-up stain may affect existing stain."

### FDC Faux Beams – Exterior Use:

Faux beam products are intended for interior use but may be used in an exterior application only if coated with a protective polyurethane coat that contains UV (ultra violet) repellent.



### Beam Installation Instructions:

- Secure A wood Block To The Ceiling Ever 4-5 Feet.
- Slide The Opening Of The Beam Over The Wooden Blocks Attached to The Ceiling.
- Place A Line Of Adhesive On the Edge Of The Beam.
- Attached Two Screws/Nails Into The Side Of The Beam. These Screws Will Go Into The Wooden Block Attached To The Ceiling.
- This Will Secure The Beam To The Ceiling.